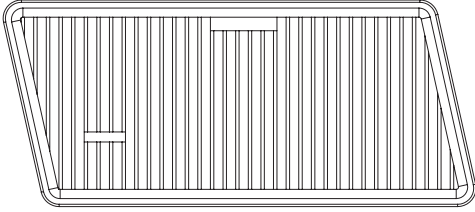


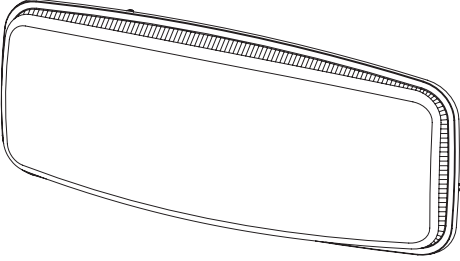
Sis Lamba Camlar

Fog Lamp Lenses

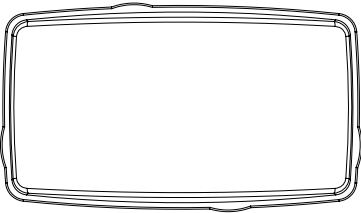


BMC**PROFESYONEL****SİS LAMBA CAM / FOG LAMP LENS**

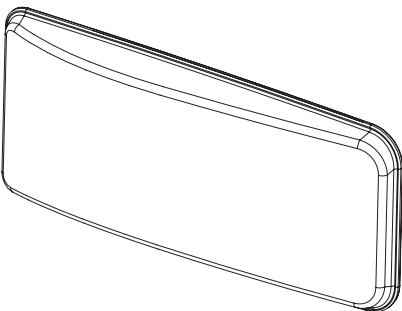
Yön / Position	Marstech Ref. No
Sağ / Right	M 691710
Sol / Left	M 691711

RENAULT**PREMIUM I****1996 - 2005****SİS LAMBA CAM / FOG LAMP LENS**

Yön / Position	Marstech Ref. No
RH = LH	M 691210

RENAULT**PREMIUM III****2015 →****SİS LAMBA CAM / FOG LAMP LENS**

Yön / Position	Marstech Ref. No
RH = LH	M 691211

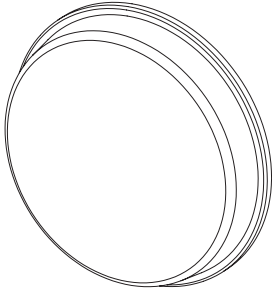
IVECO**EUROTECH - EUROSTAR****SİS LAMBA CAM / FOG LAMP LENS**

Yön / Position	Marstech Ref. No
RH = LH	M 690710

IVECO

STRALIS

2003 - 2007

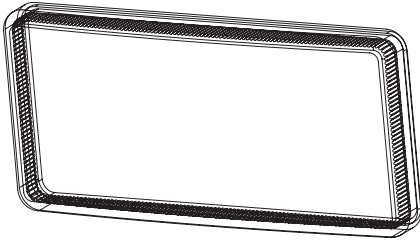


SİS LAMBA CAM / FOG LAMP LENS

Yön / Position	Marstech Ref. No
RH = LH	M 690711

MAN

TGA - TGX - TGL



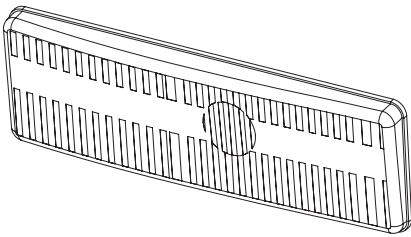
SİS LAMBA CAM / FOG LAMP LENS

Yön / Position	Marstech Ref. No
RH = LH	M 691810

MAN

F 2000

1995 →



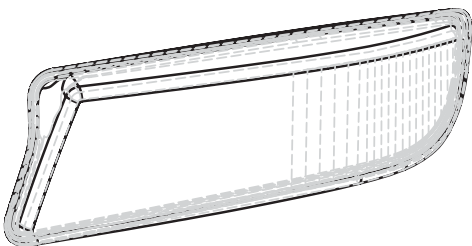
SİS LAMBA CAM / FOG LAMP LENS

Yön / Position	Marstech Ref. No
Sağ / Right	M 691811
Sol / Left	M 691812

MAN

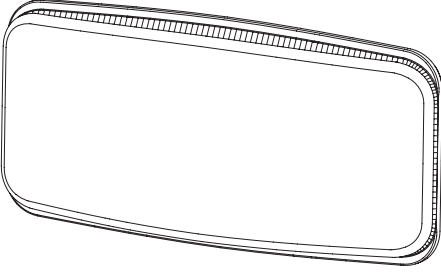
TGX

2009 →

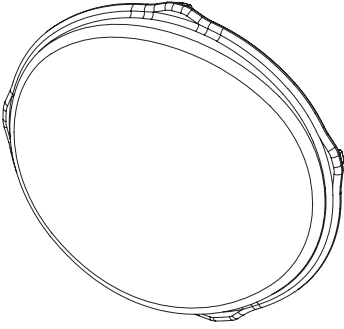


SİS LAMBA CAM / FOG LAMP LENS

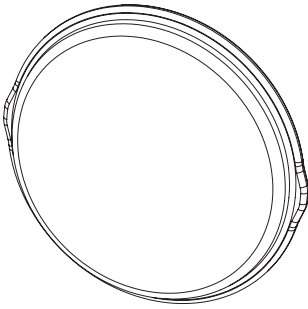
Yön / Position	Marstech Ref. No
Sağ / Right	M 691813
Sol / Left	M 691814

SCANIA**4 SERİSİ / SERIE 4 (114-124)****SİS LAMBA CAM / FOG LAMP LENS**

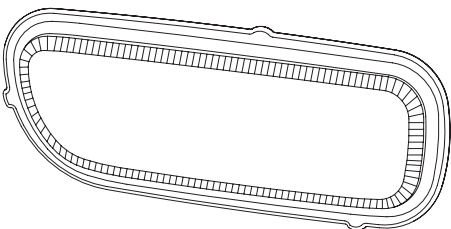
Yön / Position	Marstech Ref. No
RH = LH	M 691310

SCANIA**P - G - R - T SERİSİ / SERIE P - G - R - T****SİS LAMBA CAM / FOG LAMP LENS**

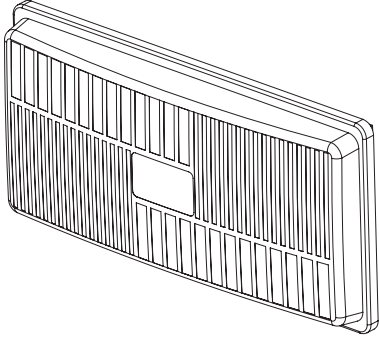
Yön / Position	Marstech Ref. No
RH = LH	M 691311

SCANIA**P - G - R - T SERİSİ / SERIE P - G - R - T****SİS LAMBA CAM / FOG LAMP LENS**

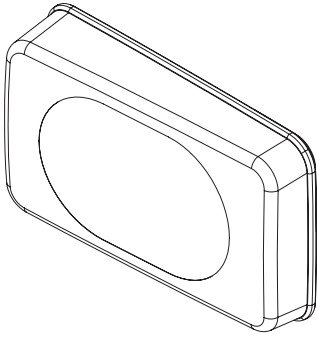
Yön / Position	Marstech Ref. No
RH = LH	M 691312

MERCEDES**AXOR II****2004 →****SİS LAMBA CAM / FOG LAMP LENS**

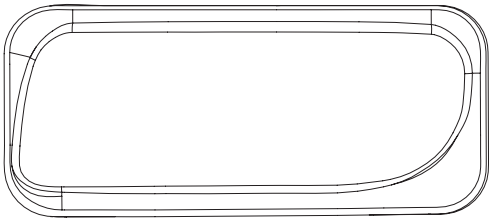
Yön / Position	Marstech Ref. No
Sağ / Right	M 690910
Sol / Left	M 690911

MERCEDES
ACTROS MP I
1996 - 2002

SİS LAMBA CAM / FOG LAMP LENS

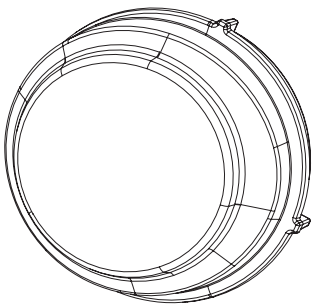
Yön / Position	Marstech Ref. No
RH = LH	M 690912

MERCEDES
ACTROS MP I
1996 - 2002

SİS LAMBA CAM / FOG LAMP LENS

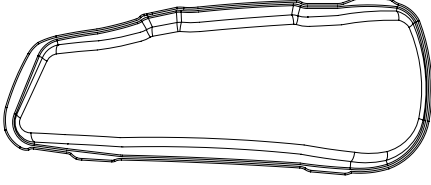
Yön / Position	Marstech Ref. No
RH = LH	M 690915

MERCEDES
ACTROS MP II / III
2003 →

SİS LAMBA CAM / FOG LAMP LENS

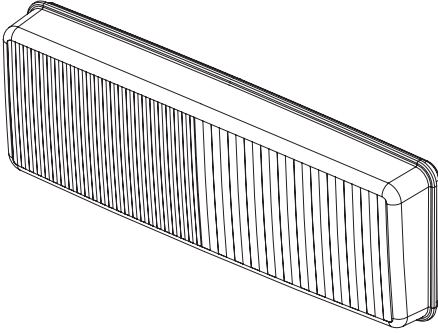
Yön / Position	Marstech Ref. No
Sağ / Right	M 690913
Sol / Left	M 690914

MERCEDES
ACTROS MP IV
2011 →

SİS LAMBA CAM / FOG LAMP LENS

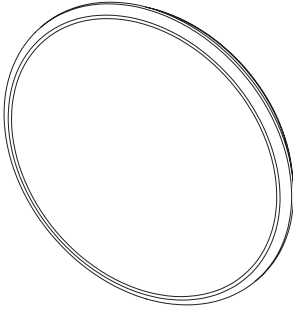
Yön / Position	Marstech Ref. No
Sağ / Right	M 690916
Sol / Left	M 690917

MERCEDES**AROCS - ANTOS****2012 →****SİS LAMBA CAM / FOG LAMP LENS**

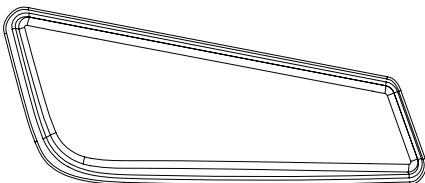
Yön / Position	Marstech Ref. No
Sağ / Right	M 690918
Sol / Left	M 690919

DAF**XF - CF - LF****1997 - 2006****SİS LAMBA CAM / FOG LAMP LENS**

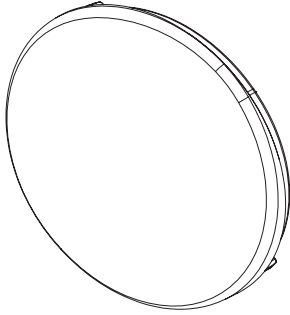
Yön / Position	Marstech Ref. No
Sağ / Right	M 692010
Sol / Left	M 692011

DAF**XF - CF - LF****2006 →****SİS LAMBA CAM / FOG LAMP LENS**

Yön / Position	Marstech Ref. No
RH = LH	M 692012

VOLVO**FH III****SİS LAMBA CAM / FOG LAMP LENS**

Yön / Position	Marstech Ref. No
Sağ / Right	M 691610
Sol / Left	M 691611

VOLKSWAGEN**CRAFTER - POLO - GOLF V - TRANSPORTER****2006 →**

CRAFTER	2006 - 2016
TRANSPORTER T5	2003 - 2009
POLO	2005 →
GOLF V	2003 - 2009

SİS LAMBA CAM / FOG LAMP LENS

Yön / Position	Marstech Ref. No
RH = LH	M 691510